



MT600 Plus SMS Commands List

Function	Instruction	Example	Reply message	Remark	Default
Set authorization number	*<cell phone number>*<PW>*<ID>**	*123456789*0000*1**	SET USER NUMBER (1-3) OK	Defaulted password is 0000. ID:[1,3]	NULL
Delete authorization number	**<PW>*<ID>**	**0000*1**	DELETE USER NUMBER (1-3) OK	ID:[1,3]	
Set password	777<new PW><old PW>	77712340000	SET USER PASSWORD OK	The password should consist of four digits or letters.	0000
Single locating	666<PW>	6660000	ID:865662000409210 Date:05:36:59 15/08/2015 Fix:A State:SMS http://maps.google.com/maps?q=+22.63146%2c1+114.03701	ID: IMEI number Fix: A=GPS available,V=GPS unavailable	
Set round Geo-fence	005<PW><R>	0050000R0.5	SET ROUND GEO-FENCE:ON	R:[0.1,999.9]KM	NULL
Enable round Geo-fence	211<PW>	2110000	SET ROUND GEO-FENCE: ON.		OFF
Disable round Geo-fence	210<PW>	2100000	SET ROUND GEO-FENCE: OFF		
Cut off fuel and power	940<PW>	9400000	SET OILWAY DISCONNECT		Connected
Resume fuel and power	941<PW>	9410000	SET OILWAY RECOVERY CONNECT		
Enable Door Siren Alarm	130<PW>	1300000	SET DOOR SIREN ON		
Disable Door Siren Alarm	131<PW>	1310000	SET DOOR SIREN OFF		
Enable Over-speed siren alarm	132<PW>	1320000	SET SPEED SIREN ON		
Disable Over-speed siren alarm	133<PW>	1330000	SET SPEED SIREN OFF		
Enable External output	960<PW>	9600000	SET OUTPUT2 ON		
Disable External output	961<PW>	9610000	SET OUTPUT2 OFF		
Overspeed alarm	#122#<PW>#X##	#122#0000#100##	SET SPEED LIMIT:ON	X:[0,999], 0 to disable. (Unit:km/h)	OFF
Set time zone	896<PW><+/-HH:MM>	8960000+08:00	SET TIME ZONE:+08:00		UTC
Set APN	#803#<PW>#<APN>## #803#<PW>#<APN>#<APN user name>#<apn PW>##	#803#0000#CMNET## #803#0000#CMNET#INTERNET#INTERNET##	SET GPRS APN OK	APN user name and password is blank	CMNET
Set Server IP and PORT	#804#<PW>#<IP address(or domain)>#<PORT>##	#804#0000#192.168.1.1#8080##	SET SERVER IP AND PORT OK		NULL
Set Upload Interval Time	#805#<PW>#interval time#X##	#805#0000#10#1##	SET GPS PERIODIC UPLOAD ON	interval time:[10,65535]s; X:[0,1],X=0, stop upload	30
	#809#password#interval time#X##	#809#0000#10#1##	SET GPS TOWED UPLOAD ON	interval time:[10,65535]s; X:[0,1],X=0, stop upload	30
	#807#password#interval time##	#807#0000#2##	SET GPS POWER SAVING UPLOAD ON	interval time:[2,1440]min; interval time=0 stop upload	5
Enable Invalid data upload	<081><PW>	0810000	INVALID DATA UPLOAD:ON		OFF
Disable Invalid data upload	<080><PW>	0800000	INVALID DATA UPLOAD:OFF		
SMS OFF	<160><PW>	1600000	SET SEND SMS:OFF.	Cannot get SMS alert in this mode	ON
SMS ON	<161><PW>	1610000	SET SEND SMS:ON		
Calling OFF	<150><PW>	1500000	SET VOICE CALL:OFF	Cannot get calling alert in this mode	
Calling ON	<151><PW>	1510000	SET VOICE CALL:ON		
LastGPS OFF	193<PW>	1930000	SET LASTGPS ON		
LastGPS ON	192<PW>	1920000	SET LASTGPS OFF		OFF
ANGLE Report	*ANGLE#<PW>#Value#3#3##	*ANGLE#0000#40#3#3##	SET ANGLE OK	Value is [1,359] degree.	
TCP/UDP	#800#<PW>#TCP##	#800#0000#TCP##	SET TCP OK		TCP
Reand config 1	*RCONF#1##				
Reand config 2	*RCONF#2##				
Restart	*RESTART#<PW>##	*RESTART#0000##	DEVICE WILL BE RESTART		
Reset	*RESET#<PW>##	*RESET#0000##	DEVICE WILL BE RESET		



MT600 Plus USB Commands List

Function	Commands	Example	Reply	Note	Default
Start	ETS	ETS	ETS,OK	For USB Config need send this command first, or other command can not set.	
Set authorization number	NUM,phone number, X	NUM,13424392330,1	NUM,OK	The X refers to the sequence of pre-stored phone numbers, and up to three authorized phone numbers can be stored	
Set password	777,password	777,1234	777,OK	password is four digits or letters	0000
Set APN	803,apn,,	803,cmnet,,	803,OK	APN username and password are blank (not filled in).	NULL
	803,APN,APN username,apn password	803,cmnet,internet,internet		APN username and password are required	
Set IP/Port	804,IP,Port	804,e.trackits.com,7700	804,OK	Also support domain and port	NULL
Set Upload Interval Time	805,interval,1	805,10,1	805,OK	interval time:[10,65535]s; X:[0,1],X=0, stop upload	30
	809,interval,1	809,10,1	809,OK	interval time:[10,65535]s; X:[0,1],X=0, stop upload	30
	807,interval	807,5	807,OK	interval time:[2,1440]min; interval time=0 stop upload	5
Set Time zone	896,X	896,+480	896,OK	X is Time zone*60. so if you want to setup the time zone to +8:00 the X value is +480 Time zone is [-12:00,+13:00]; It can't change the time zone on server.	0
Set Protocol	800,X	800,TCP	800,OK	X=TCP mean setup to TCP protocol, X=UDP means set to UDP Protocol.	TCP
		800,UDP			
Read the Configure	RCONF	RCONF	RCONF	NET:TCP GU:M600,0000 UP:0000 SRV:NC,,0 APN:,, ID:860186058179892 TZ:0 EDRX:0.5,0010 ANGLE:0,0,0 GSEN:70,70,2,187 ISSUED:30/12/20 MODEL:MT600 SV:V2.0.7 HV:V2.0.1 LIC:OK AU:Darren@Mictrack	
RESTART	REBOOT	REBOOT	REBOOT,OK	After send this command all the settings will be save and then the device will be reboot.	
RESET	RESET	RESET	RESET,OK	Device will resume to default settings.	
Save & Exit	QTS	QTS	QTS,OK	After send this command all the settings will be save and then exit the Config mode	